


Fuse Replacement

The fuse box (1) is located on the handle bar holder. Main fuse (3) is installed beside the battery. When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

WARNING: Never use a fuse with a different rating from that specified on the fuse box and never use conductive material to replace a fuse.

Do not pry the clips open to get a fuse out; you could bend them and cause poor contact with the new fuse. A loose fuse could cause damage to the electrical system and even start a fire.

- (1) Fuse box (2) Spare fuses
(3) Main fuse (4) Spare main fuse

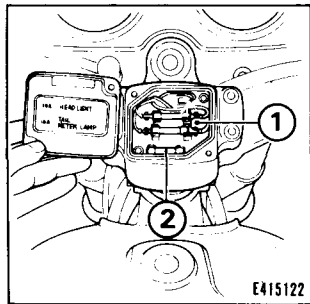

Reemplazo de los fusibles

La caja de fusibles (1) se encuentra situada en el porta-manubrio. El fusible principal (3) está instalado al lado de la batería. Cuando se produzca quemadura frecuente de fusibles, esto indica la existencia de un corto circuito o sobrecarga en el sistema eléctrico. En tal caso, consulte con su agente HONDA.

ATENCIÓN: No utilice nunca un fusible que tenga un otro régimen que lo especificado en la caja de fusibles, y nunca utilice otro material conductor en lugar de un fusible.

No abrir las precillas para sacar el fusible, ya que se pudieran doblar y hacer mal contacto con el fusible nuevo. Un fusible instalado flojo puede causar daños al sistema eléctrico e incluso provocar un incendio.

- (1) Caja de fusibles (2) Fusibles de repuesto (3) Fusible principal (4) Fusible principal de repuesto

