


## Headlight Aim Adjustment

Remove the two screws holding down the bonnet and adjust the headlight aim using the adjusters on the headlight case.

The vertical axis of the light is adjusted with the right-hand adjuster (1) and the horizontal axis with the left-hand adjuster (2).

**NOTE:** Use the Phillips head screwdriver provided for adjustment.

**CAUTION:** Adjust the optical axes in accordance with local laws and national regulations.

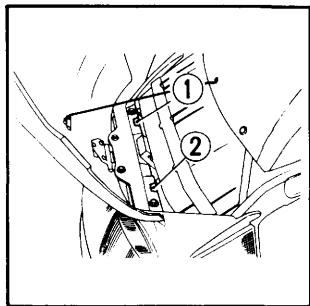

---

## Ajuste del haz del faro

Extraer los dos tornillos que sostienen la cubierta y ajustar el haz del faro utilizando para ello los ajustadores en la caja del faro.

El eje vertical de la luz se ajusta con el ajustador de la mano derecha (1) y el eje horizontal con el ajustador de la mano izquierda (2).

**NOTA:** Utilizar el destornillador de cabeza Phillips provisto para el ajuste.

**PRECAUCION:** Ajustar los ejes ópticos de acuerdo a las leyes locales y a las regulaciones nacionales.