


Fuel Gauge

The fuel gauge shows the approximate fuel supply available. At F(full) there is 20 liters (5.3 U.S. gal., 4.4 Imp. gal.), including the reserve supply. When the gauge needle first points to RES there is about 4.5 liters (1.2 U.S. gal., 1.0 Imp. gal.) left in the tank. Refil the tank as soon as possible. If the main fuel supply runs out, the last 4 liters (0.8 U.S. gal., 0.9 Imp. gal.) can be used by turning the fuel valve to RES.

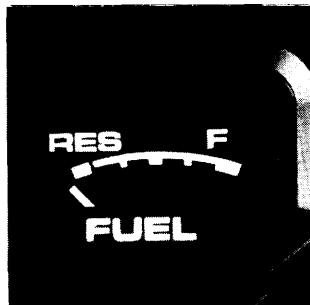

Indicador de nivel de combustible

El indicador de nivel de combustible muestra la cantidad aproximada del combustible disponible. Cuando indica la aguja el valor F (pleno), hay 20 litros de combustible en el tanque, incluyendo el de suministro en reserva. Cuando la aguja del indicador quedá, primero, en la zona RES, significa que existe todavía unos 4,5 litros de gasolina en el tanque. Llegando a esta condición, rellene el tanque cuanto más pronto que sea posible. Si el combustible del tanque principal está agotado, los últimos 4 litros serán suministrados del tanque auxiliar colocando la válvula de combustible en la posición RES.