

Ignition Switch

The ignition switch is located directly below the indicator panel.


OFF: All electric circuits open. Engine cannot be started. Key can be removed.

ACC: All electric circuits are off except for ACC terminal. Key cannot be removed.

ON: All electric circuits closed. Engine and light can be operated. Key cannot be removed.

P (PARKING): All electric circuits open except for taillight, position light and ACC terminal. Key can be removed.

LOCK (STEERING LOCK): E type only. See page 94.

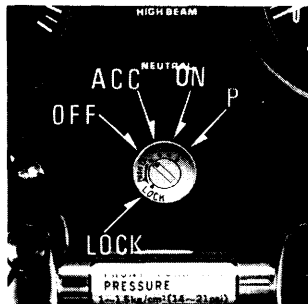

Interruptor del encendido

El interruptor del encendido está situado directamente debajo del tablero de indicadores.

OFF: Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Se puede retirar la llave.

ACC: Todos los circuitos eléctricos estarán abiertos menos el del terminal ACC. No se puede retirar la llave.

ON: Todos los circuitos eléctricos están cerrados. El motor y las lámparas pueden funcionar. No se puede retirar la llave.

P (ESTACIONAMIENTO): Todos los circuitos eléctricos están cerrados, excepto el de las lámparas traseras, el de la lámpara indicadora de posición y el del terminal ACC. Se puede retirar la llave.

LOCK (BLOQUEO DEL MANUBRIO): Solamente tipo E. Véase pág 94.