

To replace the main fuse:

Remove the left side cover and open the fuse holder cover.


Loosen the screws and discard the old fuse.

Install the new fuse and tighten the screws securely.

To replace fuse in the fuse box:

Remove the fuse box cover and the blown fuse. Install a new fuse and the fuse box cover.

(5) Blown fuse

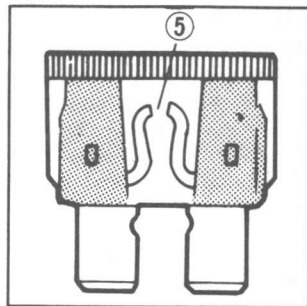

---

Pour remplacer le fusible principal - Retirer le cache latéral gauche et ouvrir le couvercle du porte-fusible.

Desserrer les vis et jeter l'ancien fusible. Mettre le nouveau fusible en place et serrer les vis à fond.

Pour remplacer le fusible dans le boîtier à fusibles - Retirer le couvercle du boîtier à fusibles et le fusible fondu. Mettre un fusible neuf en place et remettre le couvercle du boîtier à fusibles en place.

(5) Fusible fondu