

## Ignition Switch


The ignition switch is located directly below the indicator panel.

**OFF:** All electric circuits open. Engine cannot be started. Key can be removed. (Key cannot be removed: G, SD, FI)

**ON:** All electric circuits closed. Engine and light can be operated. Key cannot be removed.

**P (PARKING):** All electric circuits open except for taillight and position light. Key can be removed.

**LOCK (STEERING LOCK):** See page 80.

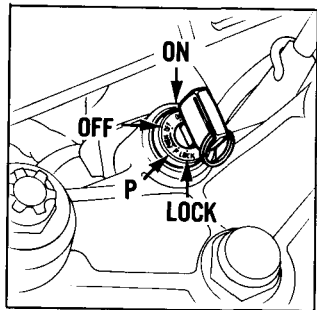

---

## Interrupteur d'allumage

L'interrupteur d'allumage se trouve directement sous le tableau d'indicateurs au centre du guidon.

**OFF:** Tous les circuits électriques sont ouverts. Le moteur ne peut pas démarrer. La clé peut être retirée.  
(La clé ne peut pas être retirée: G, SD, FI)

**ON:** Tous les circuits électriques sont fermés. Le moteur et les lampes peuvent fonctionner. La clé ne peut pas être retirée.

**P (PARKING):** Tous les circuits électriques sont ouverts, sauf ceux de feu arrière et de feu de position.  
Le clé peut être retirée.

**LOCK (VERROUILLAGE DU GUIDON):** Voir page 80.