


Fuse Replacement

The fuse box (1) is located between the handlebars. Main fuse (3) is installed beside the battery. When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

WARNING: Never use a fuse with a different rating from that specified on the fuse box and never use conductive material to replace a fuse.

- (1) Fuse box
- (2) Spare fuses

- (3) Main fuse
- (4) Spare main fuse

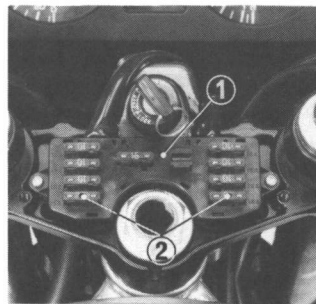

Remplacement des fusibles

La boîte de fusibles (1) se trouve entre le guidons. Le fusible principal est monté à côté de la batterie. Lorsque le fusible saute souvent, ceci indique un court circuit ou une surcharge du système électrique. Dans tel ca, consulter votre concessionnaire HONDA.

ATTENTION: Ne jamais utiliser des fusibles ayant une intensité différente de celle spécifiée sur la boîte de fusibles et ne jamais substituer des fusibles par les autres matériaux conducteurs.

- (1) Boîte de fusibles
- (2) Fusibles de rechange

- (3) Fusible principal
- (4) Fusible principal de rechange

