


## Fuel Gauge

The fuel gauge shows the approximate fuel supply available. At F (full) there is 22 liters (5.8 US gal 4.8 Imp. gal), including the reserve supply. When the gauge needle first points to RES zone there is about 4 liters (1 US gal 0.9 Imp. gal) left in the tank. Refill the tank as soon as possible. If the main fuel supply runs out, the last 4 liters (1 US gal 0.9 Imp. gal) can be used by turning the fuel valve to RES.

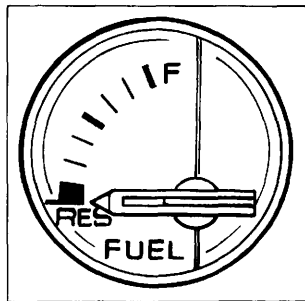

---

## Indicateur de niveau d'essence

L'indicateur de niveau d'essence indique la quantité approximative d'essence disponible. Au repère F (plein), il y a 22 litres, y compris la réserve. Lorsque l'aiguille commence à descendre dans la zone RES, il reste environ 4 litres dans le réservoir. Faire alors le plein aussitôt que possible. Si l'alimentation principale d'essence est épuisée, les derniers 4 litres peuvent être utilisés en plaçant le robinet d'essence sur RES.