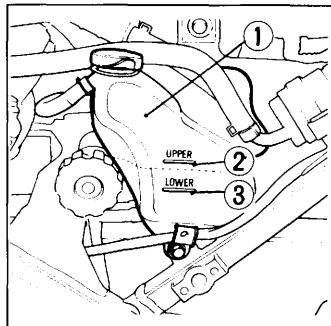


Inspection:

Remove the left side cover (page 46).

Check the coolant level in the reserve tank (1) when the engine is at normal operating temperature. Coolant level must be maintained between the upper (2) and lower (3) marks on the side of the tank. If the coolant level is near the lower level mark, top up with coolant. If there is no coolant in the reserve tank, check for leaks.

**Inspection:**

Déposer le cache latéral gauche (Page 46).

Vérifier le niveau du liquide de refroidissement du réservoir auxiliaire (1) lorsque le moteur est à la température normale de fonctionnement. Le niveau de liquide de refroidissement doit être maintenu entre les repères UPPER (supérieur) (2) et LOWER (inférieur) (3) situés sur le côté du réservoir. Si le niveau du liquide est proche du repère de niveau inférieur, faire l'appoint. S'il n'y a pas de liquide dans le réservoir auxiliaire, vérifier pour détecter la fuite.