

Headlight Beam Adjuster


To adjust the headlight beam vertically, remove the fairing inner covers (3) and turn the knob (1) in either direction.

Turn the knob (2) to adjust the headlight beam horizontally.

Obey local laws and regulations.

WARNING: Do not adjust the headlight beam while riding the motorcycle. Keep both hands on the handlebars while riding.

- (A) Up
- (B) Down
- (C) Left
- (D) Right

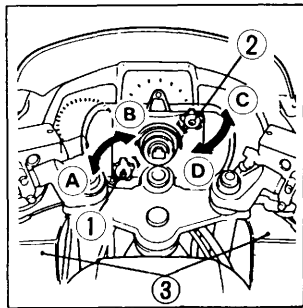

Dispositif de réglage du faisceau du phare

Pour ajuster verticalement le faisceau du phare, retirer les caches internes du carénage (3) et faire tourner le bouton (1) dans l'un des sens.

Tourner le bouton (2) pour ajuster le faisceau du phare horizontalement.

Respecter les lois et règlements locaux.

ATTENTION: Ne pas ajuster le faisceau du phare en conduisant la motocyclette. Garder les deux mains sur le guidon en conduisant.

- (A) Vers le haut
- (B) Vers le bas
- (C) Gauche
- (D) Droite