


Fuse Replacement

The fuse holder (1) is located behind the left side cover. The recommended fuse is 7A.

When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

WARNING: Never use a fuse with a different rating from that specified on the fuse holder and never use conductive material to replace a fuse.

(2) Spare fuse

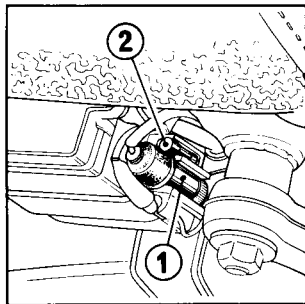

Reemplazo de fusibles

La porta fusibles (1) está situada detrás de la cubierta lateral izquierda. Los fusibles recomendables son los de 7A.

Cuando se produzca quemadura frecuente de fusibles, esto indica la existencia de un corto circuito o sobrecarga en el sistema eléctrico. En tal caso, consulte con su agente HONDA.

PRECAUCION: No utilice nunca un fusible que tenga un otro régimen que lo especificado en la porta fusibles, nunca utilice otro material conductor en lugar de un fusible.

(2) Fusibles de repuesto