


Battery

If the motorcycle is operated with insufficient battery electrolyte, sulfation and battery plate damage will occur.

If rapid loss of electrolyte is experienced, or if your battery seems to be weak, causing electrical problems, see your authorized Honda dealer.

Battery electrolyte:

The battery (1) is behind the right side cover. Remove the side cover to check the battery electrolyte. The electrolyte level must be maintained between the upper (2) and lower (3) level marks on the side of the battery. If the electrolyte level is low, remove the fuse holder and bolt (4) and open the bracket for access to the battery. Remove the battery filler caps (5).

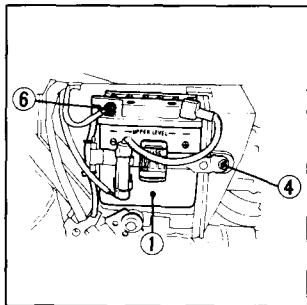

BATTERIE

Si l'électrolyte de la batterie est insuffisante, il s'ensuivra une sulfatation et une détérioration des plaques de la batterie.

En cas de pertes rapides d'électrolyte, ou si la batterie semble faible et présente des problèmes d'ordre électrique s'adresser au concessionnaire Honda.

Electrolyte de la batterie:

La batterie (1) se trouve derrière du capot latéral droit. Déposer le capot latéral pour vérifier le niveau de l'électrolyte.

L'électrolyte doit être maintenu entre les repères de niveau maximum (2) et minimum (3) qui se trouvent sur le côté de la batterie. Si le niveau de l'électrolyte est insuffisant, retirer le porte-fusible et le boulon (4) et ouvrir la patte de fixation pour avoir accès à la batterie. Dévisser les bouchons de remplissage (5).

