


Air Cleaner Servicing

1. Remove the air cleaner cover (2) by unscrewing the cover bolt (1).
2. Loosen the element set band (3) and remove the element holder wing nut (4).
3. Remove the element holder. Remove the element from the holder.
4. Wash the cleaner element (5) in clean solvent and allow to dry thoroughly.
5. Soak the air cleaner element in clean gear oil (SAE80-SAE90) until saturated, then squeeze out excess oil.
6. Reinstall the air cleaner and cover.


WARNING: Gasoline or low flash point solvents are highly flammable and must not be used to clean the element.

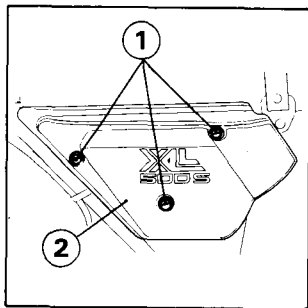

Mantenimiento del filtro de aire

1. Desmonte la cubierta (2) del filtro de aire desatornillando el perno (1) de la misma.
2. Afloje la banda de ajuste del elemento (3) y desmonte la tuerca de oreja (4) del porta-elemento.
3. Desmonte el porta-elemento. Quite el elemento del porta-elemento.
4. Lave el elemento del filtro (5) en un solvente limpio y déjela secar completamente.
5. Ponga a remojar el elemento del filtro de aire en el aceite de engranaje (SAE80-SAE90) limpio hasta que sature. Luego, sáquele para purgar el exceso del aceite.
6. Vuelva a instalar el filtro de aire y la cubierta del mismo.

PRECAUCION: La gasolina y otros solventes de bajo punto de ignición son extremadamente inflamables y no deben utilizarse para lavar el elemento.

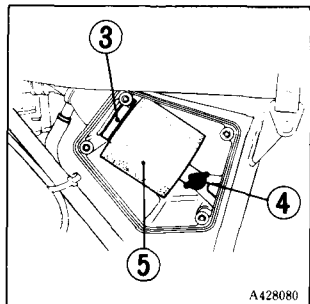

A428080