


Drive chain adjustment:

1. Place the motorcycle on the side stand.
2. Remove the rear axle nut cotter pin (2) and loosen the rear axle nut (3). Then loosen the lock nuts (4) and turn the adjusting bolts (5).
3. Adjust the chain slack.
4. After adjusting, check the chain adjuster index mark (6) align with corresponding scale (7) graduation on both side of swingarm.

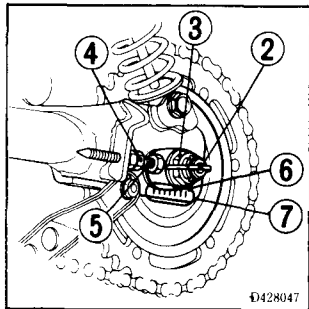

Ajuste de la cadena de transmission

1. Apye la moto en el soporte lateral.
2. Para ajustar, quite el pasador hendido (2) de la tuerca del eje trasero y afloje la tuerca del eje trasero (3). Luego, afloje las tuercas fiadoras (4) y gire los pernos de ajuste (5).
3. Ajustar la curvatura por flexión lateral de la cadena.
4. Después del ajuste, verificar que la marca de ajuste (6) del tensor de la cadena queda alineada en la graduación correspondiente de las escalas (7) a ambos lados de la horquilla oscilante.