# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

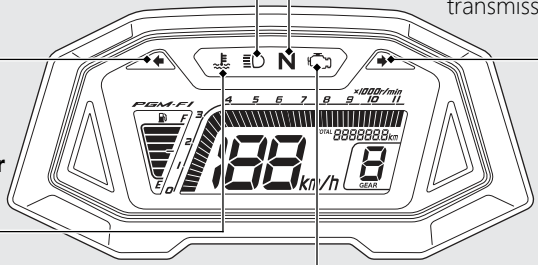


**High beam indicator**

**Neutral indicator**
Comes on when the transmission is in Neutral.

**Left turn signal indicator**

**Right turn signal indicator**

**High coolant temperature indicator**
Comes on briefly when the ignition switch is turned to ▌(On) position.
**If it comes on while riding:**
➡P.78

**PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**
Comes on briefly when the ignition switch is turned to ▌(On) position.
**If it comes on while engine is running:** ➡P.79