


FRONT WHEEL/SUSPENSION/STEERING


Apply grease to the throttle pipe sliding surface and throttle cable contact point.
Install the throttle grip to the handlebar.
Install the grip end.
Tighten the grip end screw to the specified torque.

TORQUE: 8.8 N·m (0.9 kgf·m, 6.5 lbf·ft)

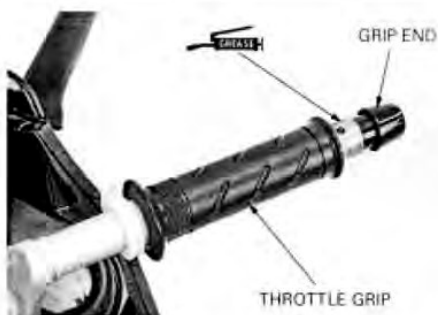

Apply grease to the throttle cable end.

Connect the throttle cable to the throttle pipe.
Install the throttle housing and align its locating pin of the throttle housing cover with the hole on the handlebar.

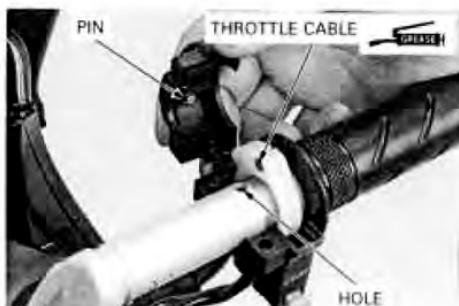

Install the screws and tighten the forward screw first, then the rear screw.



Place the front master cylinder on the handlebar and install the master cylinder holder with its "UP" mark facing up.

Align the end of the holder with the punch mark on the handlebar.
Tighten the upper bolt first, then tighten the lower bolt.

