


FRONT WHEEL/BRAKE/SUSPENSION/STEERING

Install the switch housing onto the handlebar aligning its mating surfaces with the punch mark on the handlebar.

After '85:


Insert the pin on the handlebar lower holder into the hole in the upper holder.

Tighten the upper screw first, then tighten the lower screw.

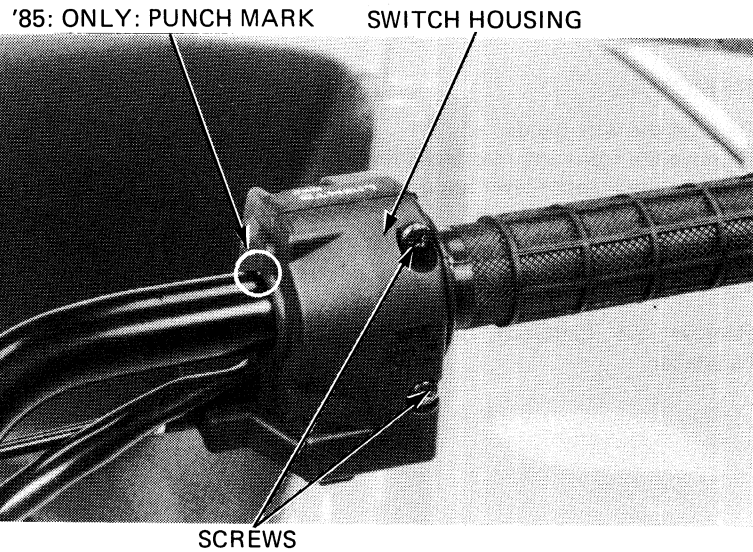

Install the rear brake lever bracket with the dot mark on the holder facing up. Align the end of the holder with the punch mark on the handlebar.

Tighten the upper screw first, then the lower screw.

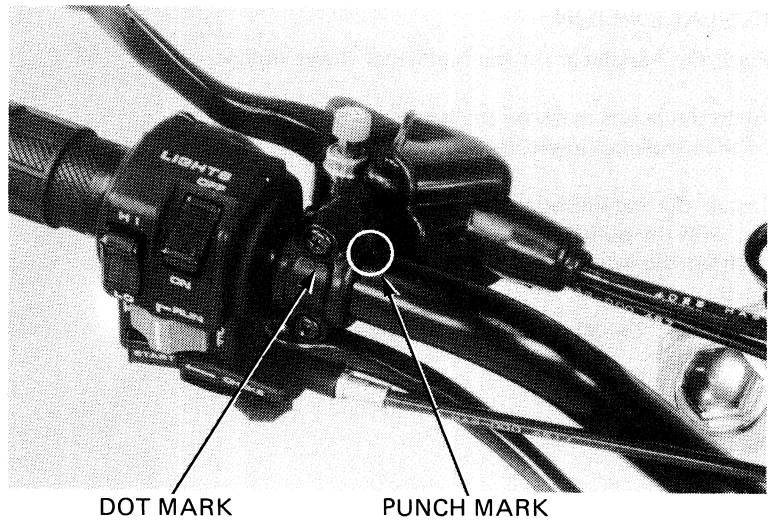

Install the front brake lever bracket with the dot mark on the holder facing up. Align the end of the holder with the handlebar punch mark.

Tighten the upper screw first, then the lower screw.

