



TIRE REPAIR (WITH COLD PATCH)

Check the tire tread for puncturing objects.
Chalk mark the punctured area and remove the puncturing object.

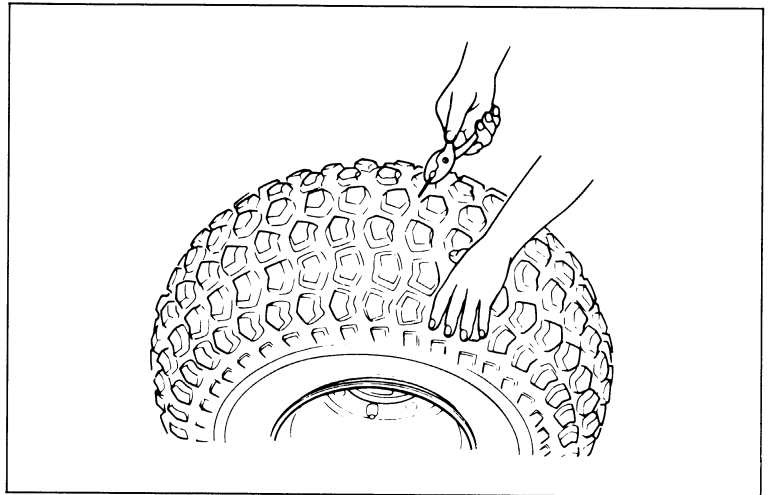

Clean and roughen the punctured area inside the tire with a tire rubber cleaner or a wire brush. Clean the area with non-flammable solvent.

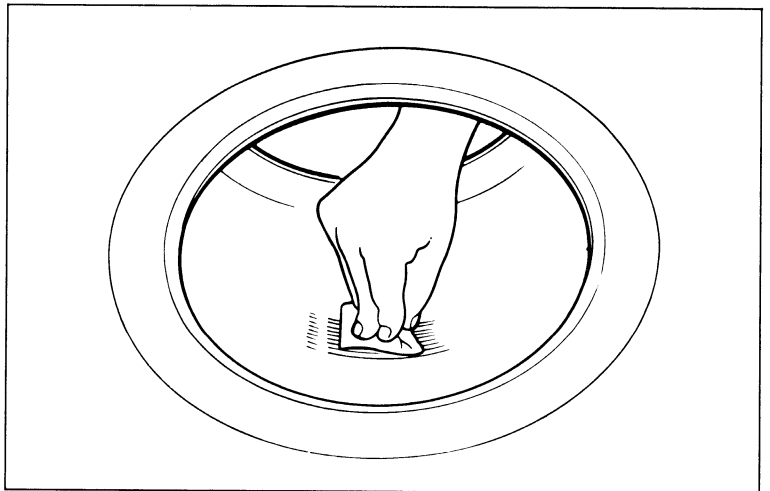

Apply rubber cement around the torn area and allow it to dry. Remove the lining from the patch and center it over the injury. Press the patch against the injury using a special roller.

NOTE

- Allow cement to dry until tacky before applying patch.
- Do not touch cement surface with dirty or greasy hands.

