

### Rebound Damping:

To reduce (SOFT) :



Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.

To adjust the adjuster to the standard position, proceed as follows :

1. Remove the bolts (1) and chain cover (2).
2. Turn the damping adjuster (3) clockwise until it will no longer turn (lightly seats). This is the full hard setting.
3. Turn the adjuster counterclockwise 8 – 11 clicks until the punch mark (4) on the adjuster aligns with the reference mark (5). This is the standard position.

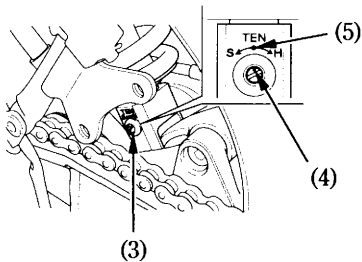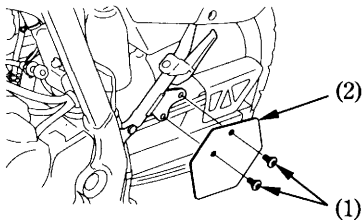

- |                      |                    |
|----------------------|--------------------|
| (1) Bolts            | (4) Punch mark     |
| (2) Chain cover      | (5) Reference mark |
| (3) Damping adjuster |                    |