



Install the tab ④ into the upper fairing groove while pressing area E.

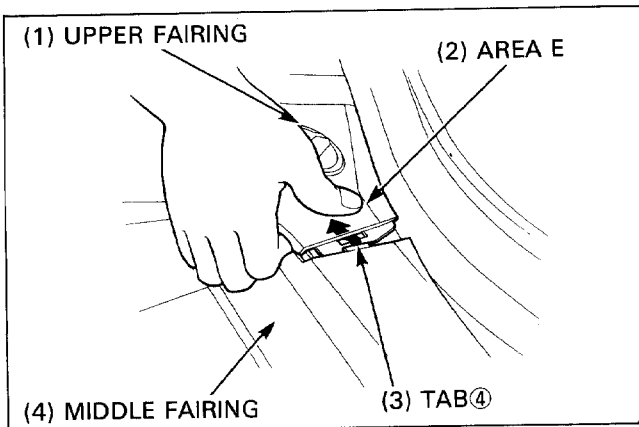

Install the front lower screw.  
Tighten the quick screws.

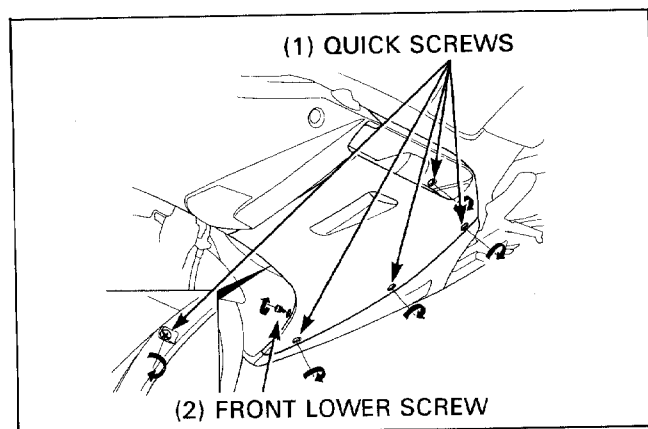

After '93:

### Removal

Turn the five quick screws counterclockwise 90°. Remove the socket bolt.

Release the front lower edge of the middle fairing from the lower fairing and the tab of the upper fairing from the middle fairing groove.

Raise the lower end of the middle fairing outward by supporting the upper mounting portion (upper tabs) until the upper tabs can be released from the upper fairing slits.

Remove the middle fairing downward.

### CAUTION

- Be careful not to break the fairing tabs.

### Installation

Insert the upper tabs into the slits of the upper fairing and align the groove with the tab of the upper fairing. Carefully press the lower portion of the middle fairing. Make sure the front lower edge and front tabs securely installed.

Tighten the quick screws and socket bolt securely.

After '93:

(1) GROOVE AND TAB

(2) TABS AND SLITS

