

Rear Brake Lever/Parking Brake

Free play, measured at the tip of the brake lever (1) should be within 15–20 mm (5/8–3/4 in.).

Adjustment:


Make sure that the free play of rear brake pedal is within 15–20 mm (5/8–3/4 in.).

If the free play of rear brake pedal is not within 15–20 mm (5/8–3/4 in.).

Adjust the rear brake pedal free play first and next adjust the rear brake lever.

Minor adjustments can be made with the cable adjuster (2) on the brake lever. Loosen the lock nut (3) and turn the brake cable adjuster.

Major adjustment should be made using the lower adjuster (4).

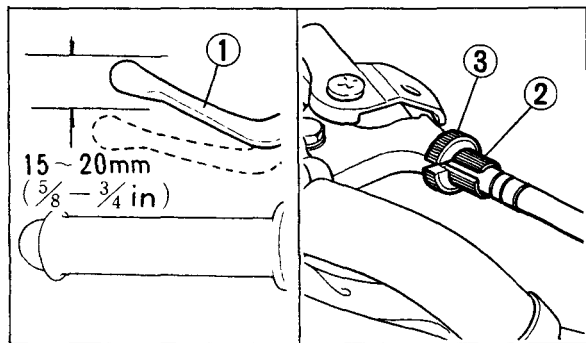

(1) Brake lever

(2) Cable adjuster

(3) Lock nut


CAUTION:

* When adjusting the rear brake lever.
Adjust the rear brake pedal first.

Other Checks:

Check the brake cable for kinks or signs of wear that could cause sticking or failure. Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear and corrosion.

Make sure the brake arm, and fasteners are in good conditions.

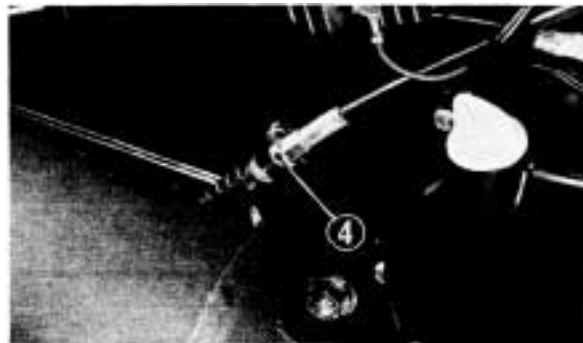

(4) Lower adjuster