

Adjustment:


1. Adjust brake lever free play with the front brake adjusting nut (1). Turning the nut clockwise will decrease free play and turning the nut counterclockwise will increase free play.
Make sure the cut-out on the adjusting nut is seated on the brake arm pin (2) after making final free play adjustment.
2. Apply the brake several times and check for free wheel rotation when released.

NOTE

If proper adjustment cannot be obtained by this method see your Honda dealer.

Other-Checks:

Check the brake cable for kinks or signs of wear that could cause sticking or failure. Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear and corrosion. Make sure the brake arm, spring and fasteners are in good condition.

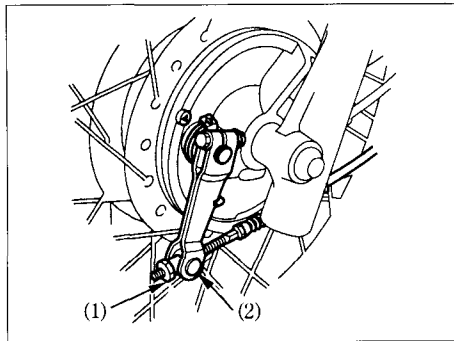

- (1) Front brake adjusting nut
- (2) Brake arm pin