



### Starting Procedure

To restart a warm engine, follow the procedure for “High Air Temperature.”

#### Normal Air Temperature

10°–35°C (50°–95°F)


1. Pull the choke lever (1) back all the way to Fully ON (A), if the engine is cold.
2. With the throttle closed, press the start button.

Do not use the electric starter for more than 5 seconds at a time. Release the start button for approximately 10 seconds before pressing it again.

3. Immediately after the engine starts, operate the choke lever to keep fast idle.
4. About a quarter minute after the engine starts, push the choke lever forward all the way to Fully OFF (B).
5. If idling is unstable, open the throttle slightly.

### NOTICE

Extended use of the choke may impair piston and cylinder wall lubrication and damage the engine.

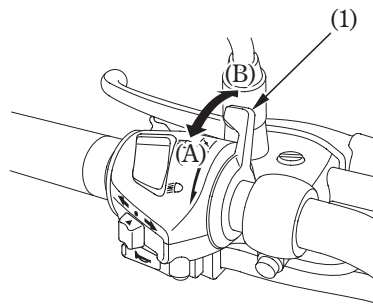

(1) Choke lever

(A) Fully ON  
(B) Fully OFF

