



### Brake pedal height adjustment

1. Remove the rubber cap (2) with a screwdriver.
2. Loosen the lock nut (3).
3. Turning the adjusting nut (4) in direction (A) will increase the pedal height and turning it in direction (B) will decrease the pedal height.

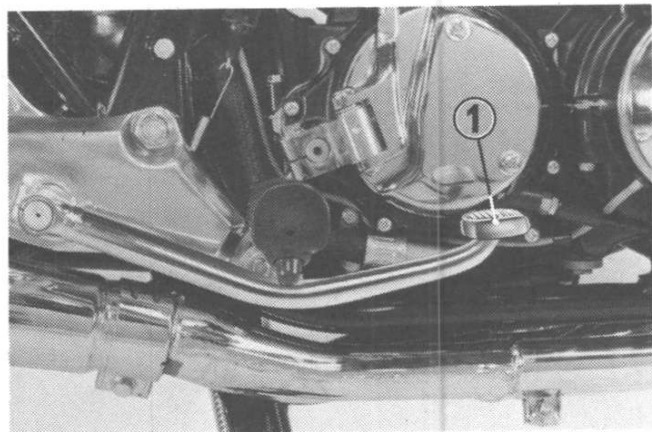

(1) Rear brake pedal

Clearance between the brake pedal arm and the foot rest should be not less than 5 mm (0.2 in.). After adjusting, Tighten the lock nut securely.

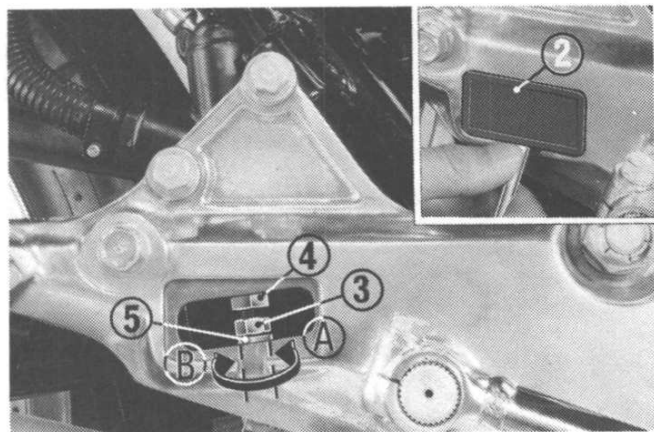

(2) Rubber cap  
(3) Lock nut

(4) Adjusting nut  
(5) Brake rod