


2. Front Fork Oil Change

To maintain good riding characteristics and increase fork service life, the oil in the front fork should be changed periodically. This should be done at least every 12 months or 6,000 miles (10,000 km), whichever reaches first.


- a. Unscrew the front fork drain plug ① at the bottom of fork cylinder, drain

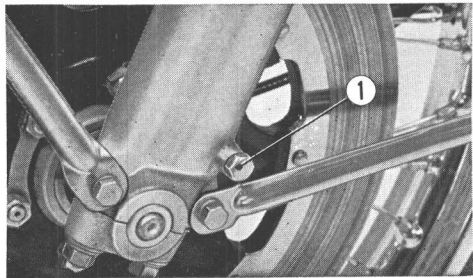

① Front fork drain plug

the oil by pumping the fork while plug is out. Replace the plug securely after draining.

- b. Remove the top filler ② and fill the fork cylinder with 7.0~7.3 ozs. (220~230 cc) of **premium quality oil of SAE 10W-30 grade.**
- c. Securely tighten the top filler plug after filling.

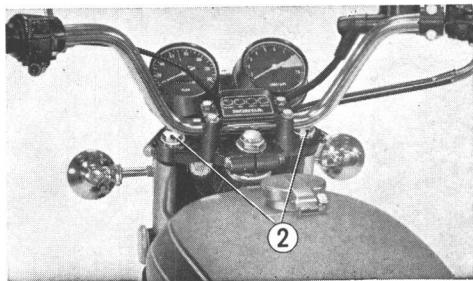

② Top filler plug