


4. Remove the left caliper assembly (4).  
Remove the right caliper assembly (5)  
from the fork leg by removing the  
fixing bolts (6).

**CAUTION:**


- \* To avoid damage to the brake  
hose, support the caliper assem-  
bly so that it doesn't hang from  
the hose. Do not twist the brake  
hose.

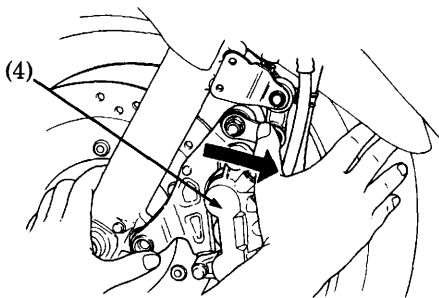

(4) Left caliper assembly

**NOTE:**

- \* Do not depress the brake lever and  
brake pedal when the wheel is off the  
motorcycle. The caliper piston will be  
forced out of the cylinder with  
subsequent loss of brake fluid. If this  
occurs, servicing of the brake system  
will be necessary. See your authorized  
Honda dealer for this service.

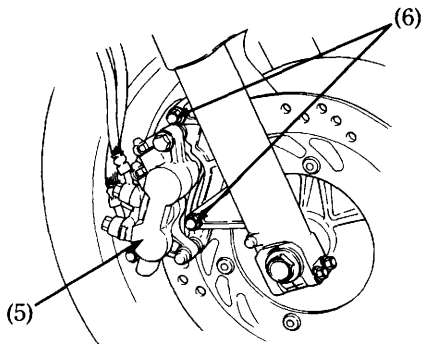

(5) Right caliper assembly      (6) Fixing bolts