


# Brakes

5. Tighten the front brake cable guide bolt.
6. Apply the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.
7. Check the freeplay. If you cannot adjust the freeplay properly, see your Honda dealer.

## Rear Brake Pedal Freeplay

RIGHT SIDE

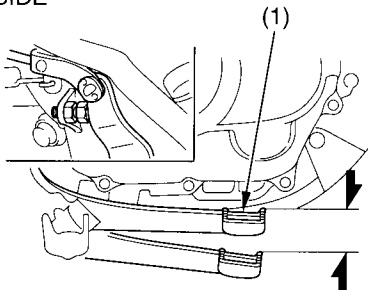

(1) rear brake pedal


## Inspection

1. Place your motorcycle on its side stand.
2. Check freeplay by slowly depressing the brake pedal (1) until the brake starts to engage.  
Freeplay:  $13/16 - 1 \frac{3}{16}$  in (20–30 mm)

If necessary, adjust to the specified range.

## Adjustment

RIGHT REAR

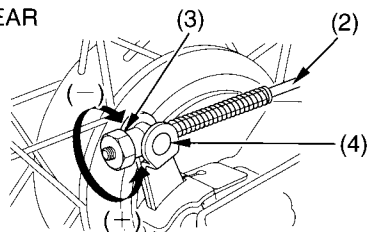

(2) brake rod  
(3) adjusting nut  
(4) brake arm pin

(+) increase freeplay  
(-) decrease freeplay