


Carburetor Adjustments & Tuning Tips

Drain the carburetor into an approved gasoline container and dispose of it in an approved manner (page 142).

NOTICE


Improper disposal of drained fluids is harmful to the environment.

3. Tighten the drain screw.
4. Remove the fuel tank (page 30).
5. Remove the subframe (page 32).
6. Loosen the insulator band screw (2).

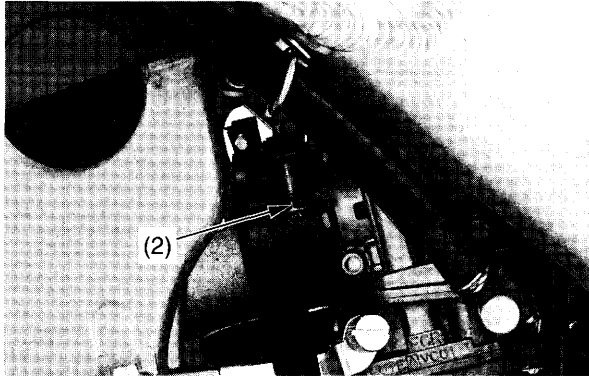


(2) insulator band screw

7. Disconnect the throttle sensor connector (3).

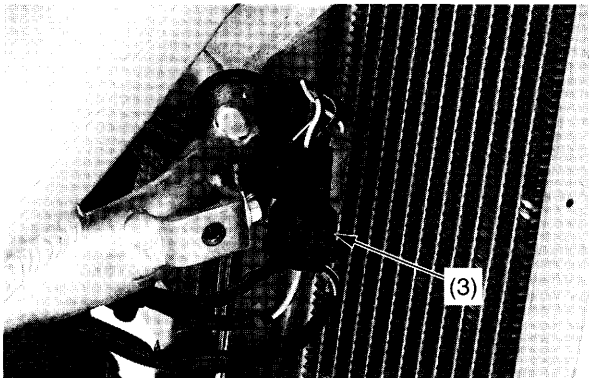


(3) throttle sensor connector

8. Remove the carburetor.
9. Remove the hot start cable holder (4).

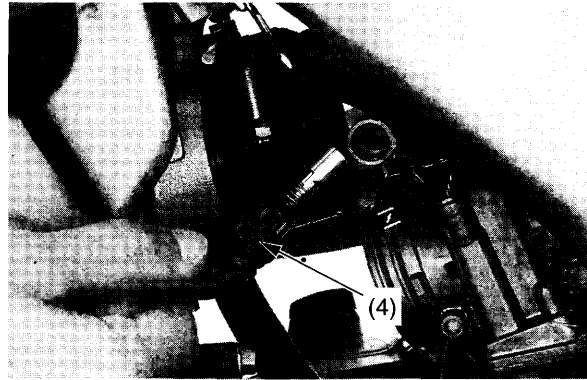


(4) hot start cable holder

10. Disconnect the rear suspension (5), upper mounting nut and bolt (6).

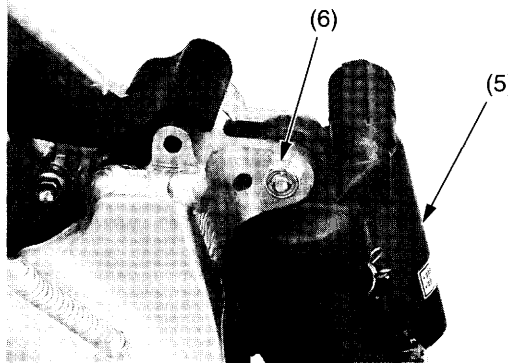


(5) rear suspension
(6) upper mounting nut/bolt

11. Remove the throttle drum cover bolt (7) and throttle drum cover (8).

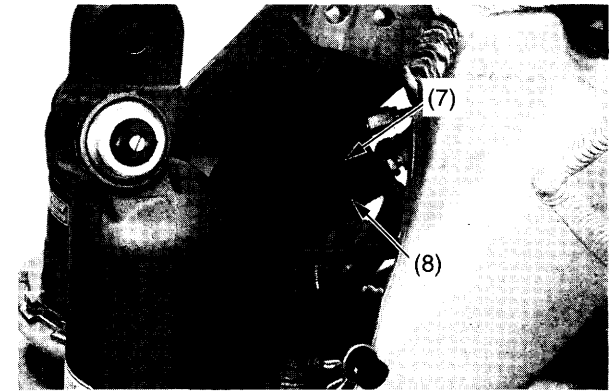

(7) throttle drum cover bolt
(8) throttle drum cover

12. Loosen the lock nut (9), adjusters (10) and disconnect the throttle cables (11) from the throttle drum (12).

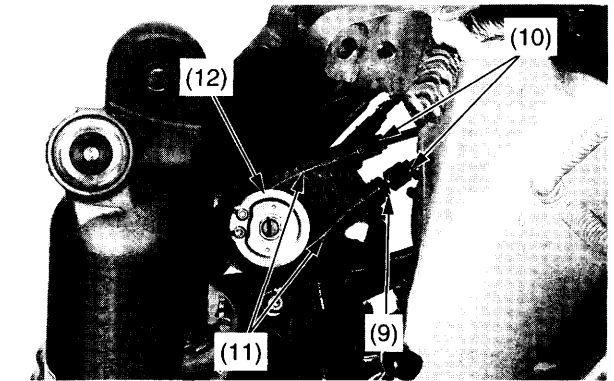

(9) lock nut
(10) adjusters
(11) throttle cables
(12) throttle drum