


Clutch Adjustment: (CT 185)

1. The normal clutch lever free play should be 10–20mm (0.4–0.8 in.) at the lever end. If adjustment is necessary, loosen the lock nut (1) on the lower adjuster (2) and make the major adjustments.

Turning the adjuster in direction (A) will decrease the free play of the clutch lever.

2. Minor adjustments can also be made in the same manner at the upper adjuster (3).

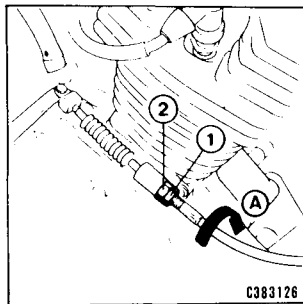

Ajuste del embrague: (CT 185)

1. El juego normal de la palanca del embrague deberá ser de 10–20 mm. Cuando se necesite un ajuste, aflojar la tuerca fijadora (1) situada en el ajustador inferior (2) y efectuar el ajuste. Hacer girar el ajustador en una dirección de (A), y el juego de la palanca del embrague será reducido.
2. Los ajustes menos importantes pueden también llevarse a cabo del mismo modo en el ajustador superior (3).

