


7. Run the engine for a few minutes, blipping the throttle, until it warms up enough to idle with the fuel mixture enrichment lever raised.

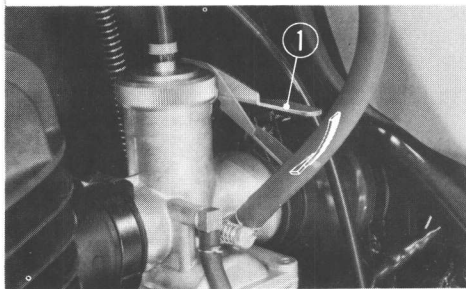

① Fuel mixture enrichment lever

If the engine fails to start after several attempts, it may have become flooded with excess fuel.

To clear the engine of excess fuel, turn the main switch OFF, raise the fuel mixture enrichment lever, and operate the kick starter pedal two or three times with the throttle fully open. Then turn the main switch on, close the throttle, and kick start the engine.

If the engine still fails to start, remove the spark plug and dry the electrodes with a clean cloth.