


Throttle Grip Play

For safe, positive and consistent engine response the good condition and operation of the throttle grip and throttle cable is a must.

1. Check for the smooth rotation of the throttle control grip from the full open to the full close positions. Check when at full left and full right steering positions.
2. Standard throttle grip free play is approximately $10\sim 15^{\circ}$ of the grip rotation. If grip free play rotation exceeds, this adjustment of the throttle cable adjuster ② is necessary.

Turn the cable adjuster until grip free play rotation becomes $10\sim 15^{\circ}$.

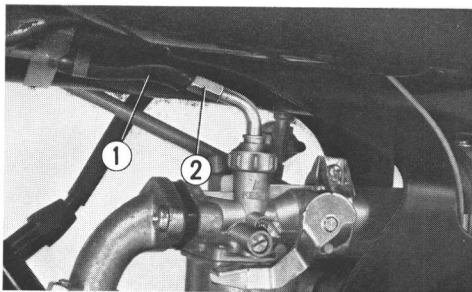

- ① Rubber cap
② Throttle cable adjuster

Carburetor

Perform the carburetor adjustment as necessary. Make the carburetor adjustment after the engine attains operating temperature.