


• BRAKE INSPECTION

- Check the front and rear brake levers for free play.




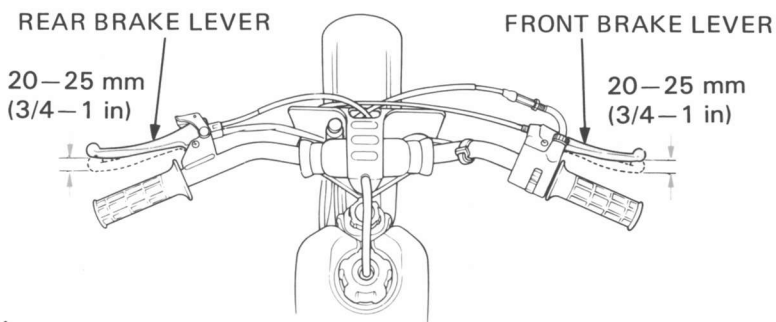


PLAY:

Measure the distance the brake lever moves before the brake starts to take hold.

Free play should be 20–25 mm (3/4–1 in).

- If adjustment is necessary, turn the brake adjusting nut.

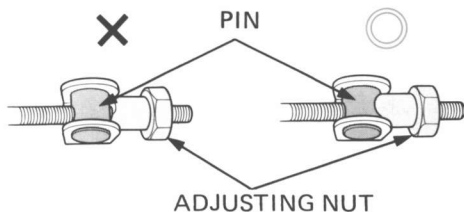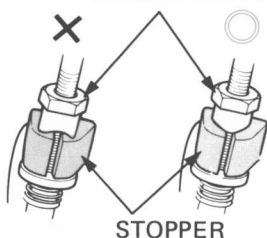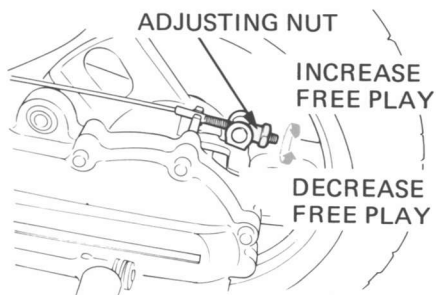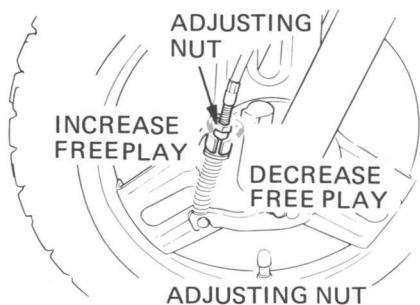

NOTE:

* **Front brake:** Make sure that the projection on the adjusting nut is aligned with the stopper.

Rear brake: Make sure that the cutout on the adjusting nut is seated on the brake arm pin.

* If proper adjustment cannot be obtained by these methods, see your authorized Honda dealer.