




System Start-up

System Failure to Display a Position Fix


If the receiver does not get a position fix within about 8 minutes (flashing antenna mark (1) as shown in the illustration), make sure there are no overhead obstructions (building, trees, canopy, etc.) and then perform the following:

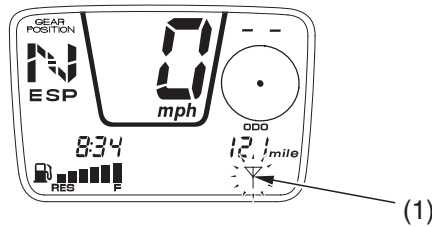

(1) antenna mark

1. Turn the ignition switch OFF (O).
2. Remove the seat (page 158).
3. Disconnect the negative (–) terminal lead (2) from the battery (3) and wait for 1 minute.

UNDER SEAT

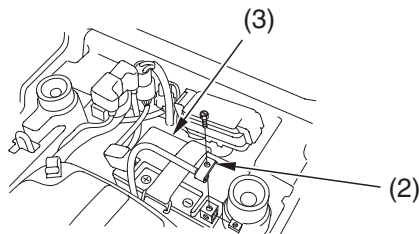

- (2) negative (–) terminal lead
(3) battery

60 GPScape System