


Battery Care

Inspecting and topping up the electrolyte level should be performed frequently as indicated in the Maintenance Schedule (page 102) and Pre-riding Inspection (page 90). The battery (1) is behind the right side cover. Remove the side cover. Check the electrolyte level.

The electrolyte level must be maintained between the upper (2) and lower (3) level marks on the side of the battery. If the electrolyte level is low, remove battery upper cover (4). Remove the bolt (5) attaching the battery holder (6).

Pull out of the battery compartment. Remove the filler cap (7) from each battery cell.

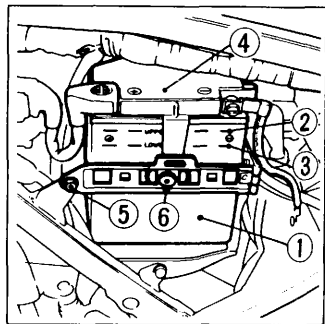

Soin de la batterie

L'inspection et l'appoint du niveau d'électrolyte doivent être effectués fréquemment comme indiqué dans le programme d'entretien (page 104) et l'inspection avant conduite (page 90). La batterie (1) se trouve derrière le cache latéral droit. Déposer le cache latéral droit. Vérifier le niveau de l'électrolyte.

Le niveau de l'électrolyte doit être maintenu entre les repères de niveau supérieur (2) et inférieur (3) sur le côté de la batterie. Si le niveau de l'électrolyte est bas, déposer le couvercle supérieur de la batterie (4). Déposer le boulon (5) fixant le support de batterie (6). Extraire le compartiment de batterie. Retirer le bouchon de remplissage (7) de chaque élément de batterie.

