



Turning the nut in the direction **A** will decrease the brake lever free play and turning the nut in the direction **B** will increase the play.

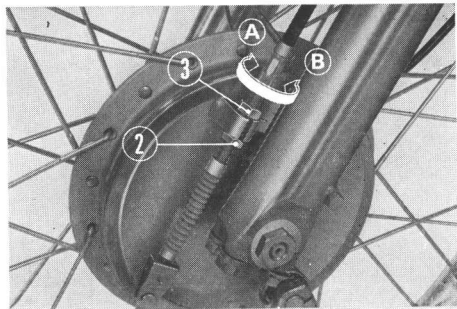

- ② Lock nut
- ③ Front brake adjusting nut

2. Minor adjustments can be made with the front brake cable adjuster on the front brake lever. Remove the dust cover **④**, loosen the lock nut **⑤** and turn the front brake cable adjuster **⑥**. Turning the adjuster in direction **A** will decrease the brake lever free play and turning the adjuster in direction **B** will increase the play.

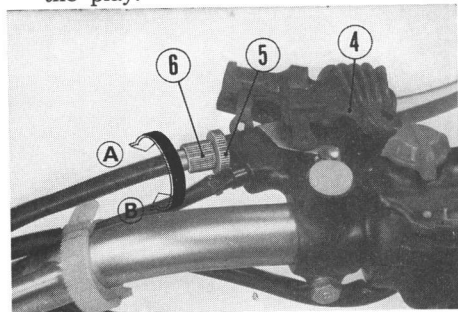

- ④ Dust cover
- ⑤ Lock nut
- ⑥ Front brake cable adjuster