


- 3 Loosen the two bolts attaching the front brake cable guide (7).

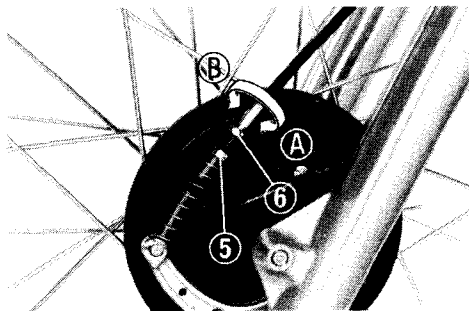


- (5) Lock nut  
(6) Adjusting nut  
(A) Increase free play  
(B) Decrease free play

4. At the lower end of the cable, loosen the lock nut (5). Turn the adjusting nut (6) to obtain the specified free play. Tighten the lock nut and check the adjustment.

**NOTE:**

- \* If proper adjustment cannot be obtained by this method, see your authorized Honda dealer.
5. Apply the brake several times and check for free wheel rotation when released.

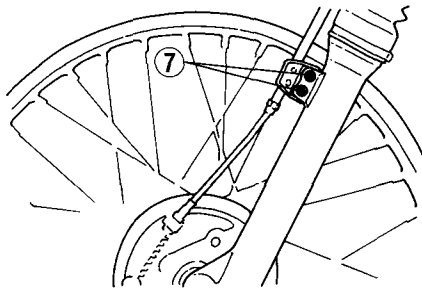

- (7) Cable guide