


TRANSMISSION/CRANKSHAFT

INSPECTION

Check the shift fork for wear, bending or damage.


Measure the I.D. of the shaft hole.

SERVICE LIMIT: 12.04 mm (0.474 in)

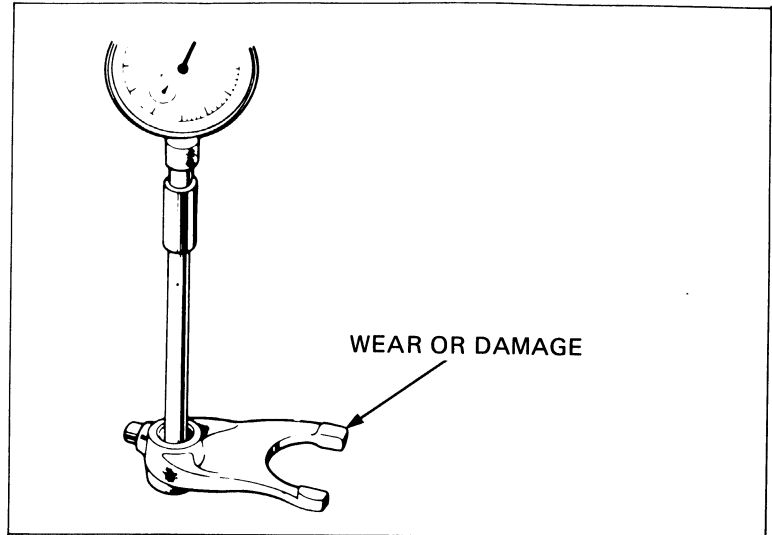

Measure the shift fork claw thickness.

SERVICE LIMIT: 4.50 mm (0.177 in)

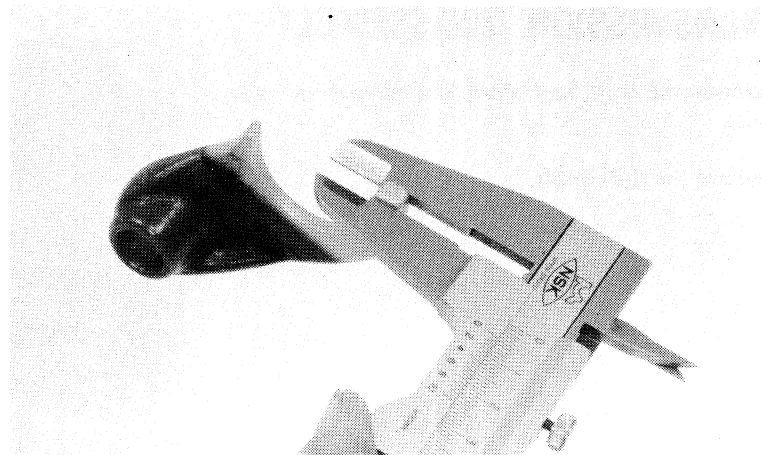

Measure the shift fork shaft O.D.

SERVICE LIMIT: 11.96 mm (0.471 in)

