


## FRONT WHEEL/SUSPENSION/BRAKE/STEERING

Install the front and rear brake lever brackets and holders on the handlebar and tighten the screws lightly.

### NOTE

Install the holders with their punch marks up.

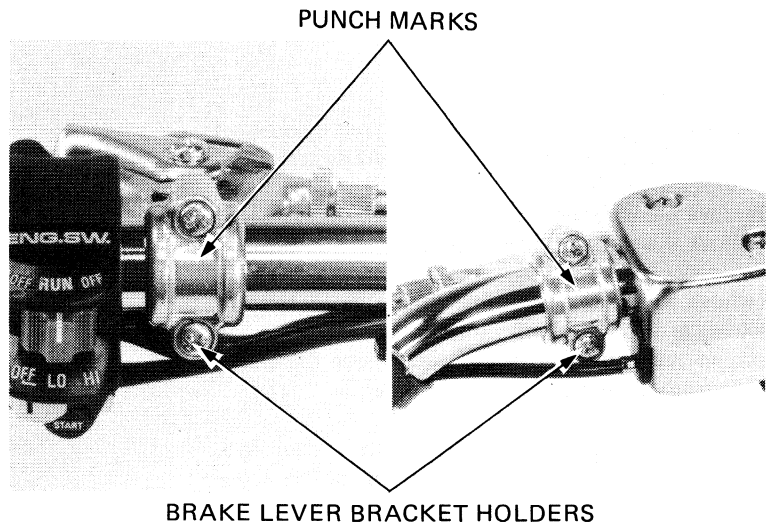


Position the front and rear brake lever brackets and holders at a angle as shown.

Tighten the holder upper screw first, then tighten the lower screw.

REAR BRAKE LEVER

FRONT BRAKE LEVER

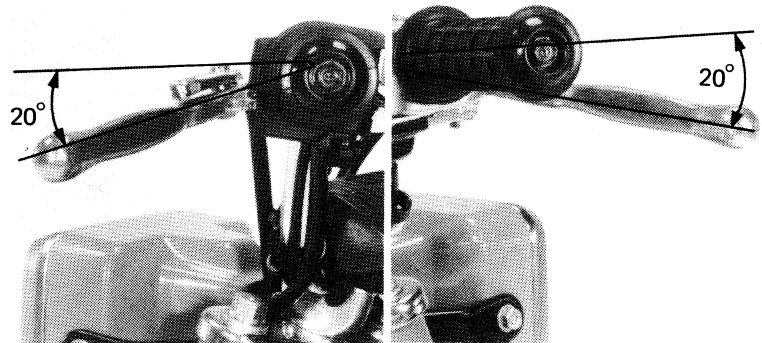

## THROTTLE LEVER

### DISASSEMBLY

'84:  
Remove the screws, throttle lever cover and throttle housing.

After '84:  
Remove the screws and throttle lever cover.

Disconnect the throttle cable from the throttle housing.

