

## IGNITION SWITCH

Remove the headlight and disconnect the ignition switch wire connector.

Check continuity of the ignition switch wires in each switch position.


### SWITCH POSITION:

'84:

OFF: Black to Green — continuity

ON: Red to Yellow/Red — continuity

Terminal Position	IG	E	BAT	HO
OFF	○	○		
ON			○	○
Color	Black	Green	Red	Yellow/Red

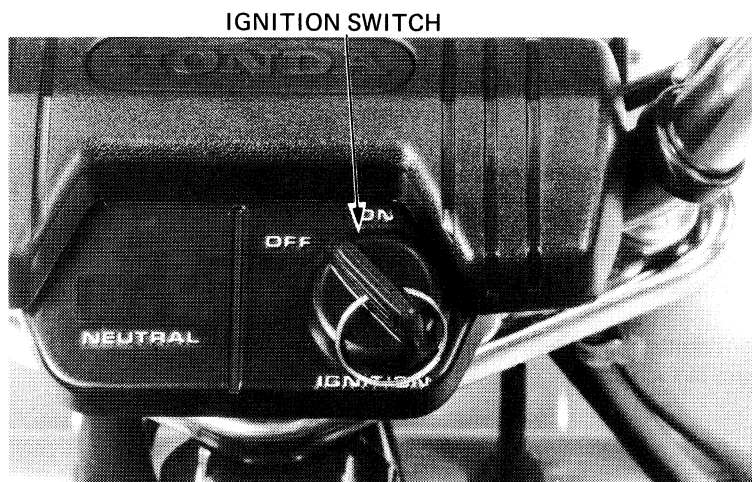

After '84:

OFF: Black/White to Green — continuity

ON: Red to Black — continuity

Terminal Position	IG	E	BAT	HO
OFF	○	○		
ON			○	○
Color	Black/White	Green	Red	Black

### REMOVAL/INSTALLATION

Remove the handlebar upper holder (Page 11-3). Release the notches on the ignition switch and remove the switch from the handlebar upper holder. Installation is the reverse of removal.

