


CALIPER CYLINDER INSPECTION

Check the caliper cylinder for scoring, scratches or other damage.

Measure the caliper cylinder I.D.

SERVICE LIMIT: 30.290 mm (1.1925 in)

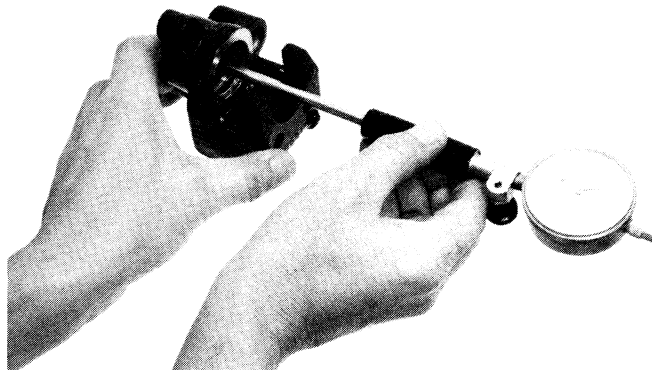


CALIPER PISTON INSPECTION

Check the piston for scoring, scratches or other damage.

Measure the caliper piston O. D.

SERVICE LIMIT: 30.140 mm (1.1866 in)

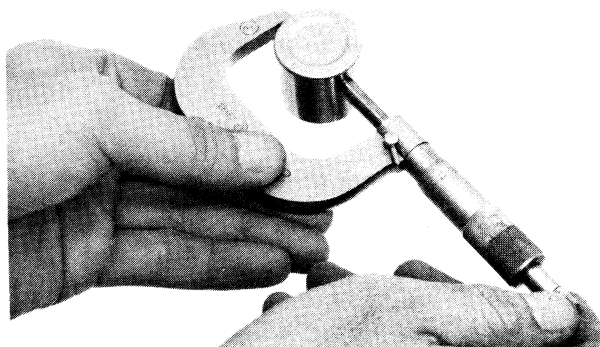

BRAKE CALIPER ASSEMBLY

Lubricate the inside diameter of the caliper cylinder with brake fluid.

Install the piston seal and metal stopper.

