
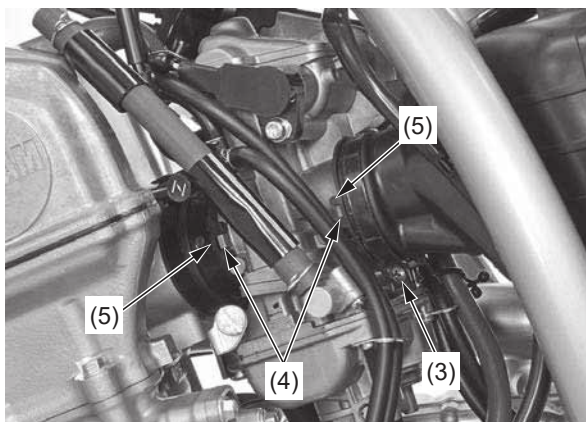



# Carburetor Adjustments & Tuning Tips

4. Tighten the drain screw.
5. Loosen the insulator band screw (2) and connecting tube clamp screw (3).
6. When installing the carburetor, align the carburetor tabs (4) with the insulator and connecting tube grooves (5).

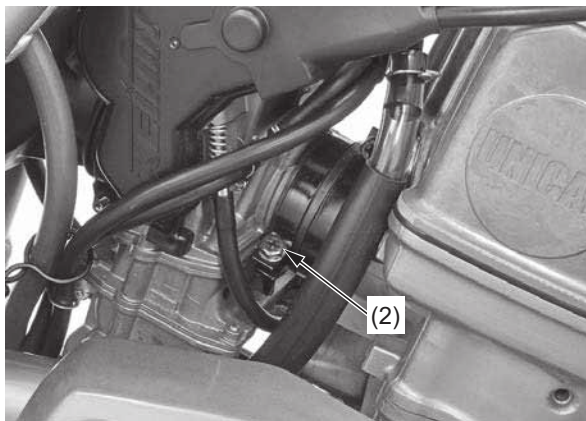


- (2) insulator band screw  
 (3) connecting tube clamp screw  
 (4) tabs  
 (5) grooves

7. Release the throttle sensor wire from the wire band (6) and clamp (7).
8. Disconnect the throttle position sensor connector (8).

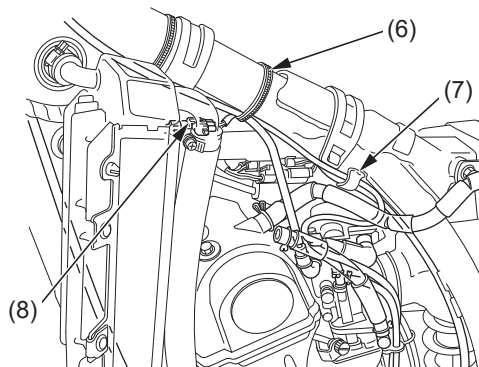


- (6) wire band  
 (7) clamp  
 (8) throttle position sensor connector

9. Pull the dust cover (9) back.
10. Remove the throttle drum cover bolt (10) and throttle drum cover (11).

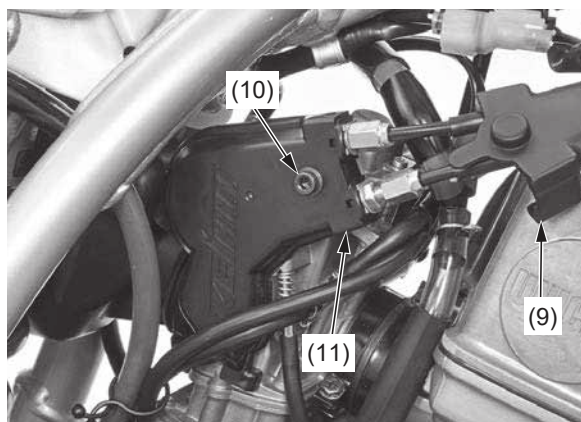


- (9) dust cover  
 (10) throttle drum cover bolt  
 (11) throttle drum cover

11. Loosen the lock nuts (12), adjuster (13) and disconnect the throttle cables (14) from the throttle drum (15).

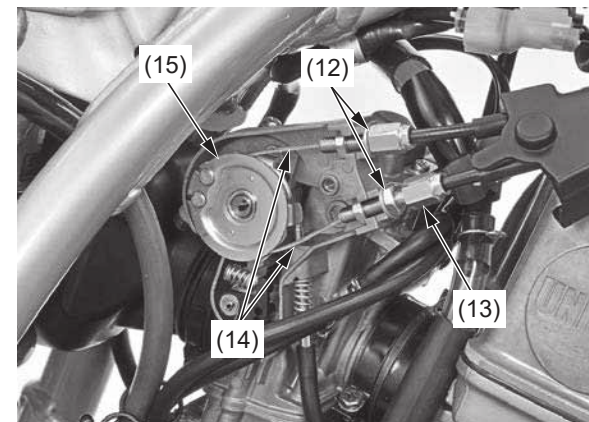

- (12) lock nuts  
 (13) adjuster  
 (14) throttle cables  
 (15) throttle drum

12. Remove the hot start cable holder (16).

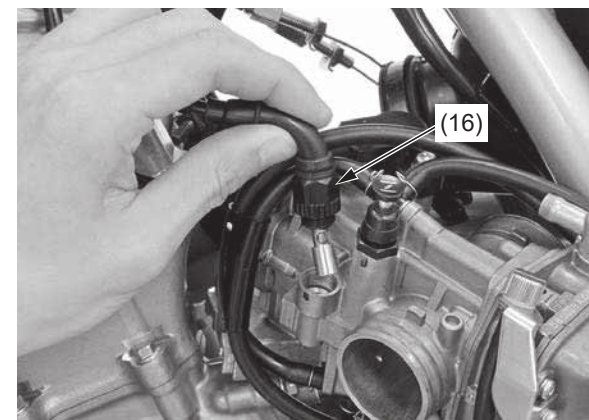

- (16) hot start cable holder