


Brakes

Rear Brake Pedal Freeplay

RIGHT SIDE

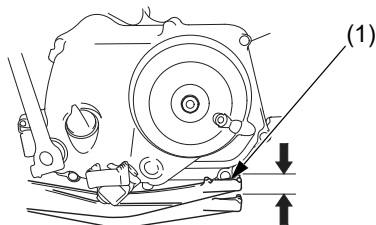

(1) rear brake pedal


Inspection

1. Place your motorcycle on its side stand.
2. Check freeplay by slowly depressing the brake pedal (1) until the brake starts to engage.

Freeplay: 3/8 – 13/16 in (10 – 20 mm)

If necessary, adjust to the specified range.

RIGHT REAR

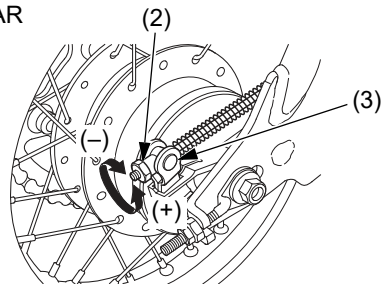

(2) adjusting nut
(3) brake arm pin

(+) increase freeplay
(-) decrease freeplay

Adjustment

1. Adjust by turning the rear brake adjusting nut (2) a half-turn at a time. Make sure the cut-out on the adjusting nut is seated on the brake arm pin (3).
2. Apply the brake, release it, and then spin the wheel and check that it rotates freely. Repeat this procedure several times.
3. Check the freeplay. If you can't adjust the freeplay properly, see your dealer.