
Tire Puncture ► Removing Wheels

- Check the clearances between each surface of the brake disc and the brake bracket (not the brake pads) are symmetrical.
 - ▶ If the clearances are symmetrical, loosen the left axle pinch bolts and pull the left fork outward or push inward to adjust the clearance.

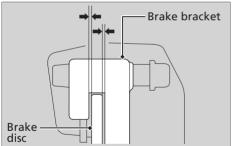

8. Tighten the right axle pinch bolts.

Torque: 16 lbf·ft (22 N·m, 2.2 kgf·m).

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.

Rear Wheel

Muffler Removal

- **1.** Park on a firm, level surface.
- **2.** Remove the right footpeg by removing footpeg bolt A, B and footpeg nut.

