


Headlight Removal/Installation

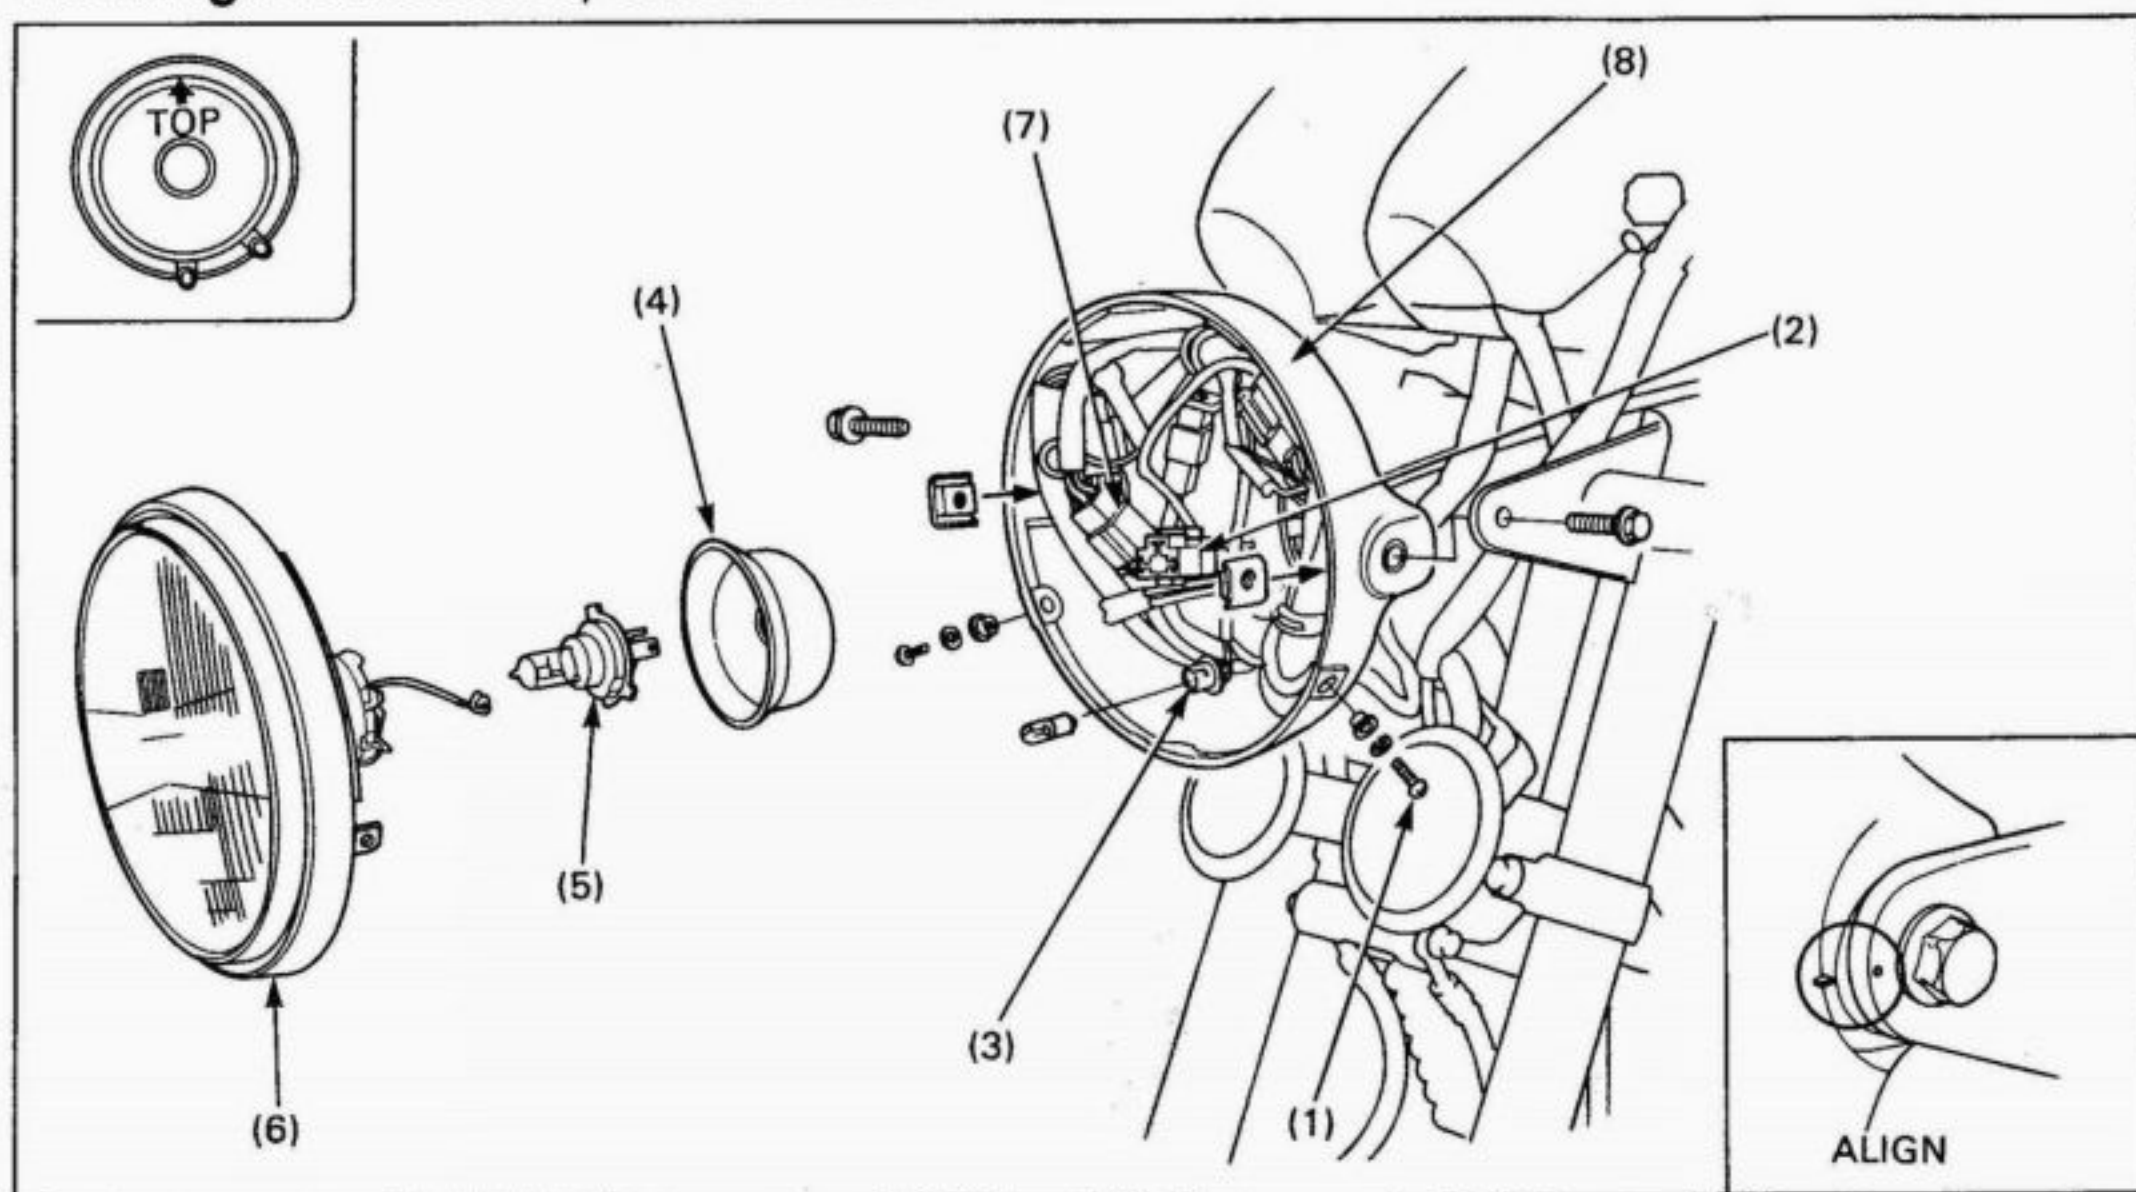

⚠ WARNING

- The halogen headlight bulb becomes very hot while the headlight is ON, and remains hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

CAUTION

- Wear clean gloves while replacing the bulb. Do not put finger prints on the headlight bulb, as they may create hot spots on the bulb and cause it to break.
- If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.
- Be sure to install the dust cover after replacing the bulb.

Procedure	Qty	Remarks
Removal Order		Installation is in the reverse order of removal.
(1) Screw	2	
(2) Headlight bulb socket	1	
(3) Position light bulb socket	1	Except U type.
(4) Dust cover	1	Install with the "TOP" mark facing up.
(5) Headlight bulb	1	
(6) Headlight assembly	1	
(7) Connectors	—	Connection (page 1-21)
(8) Headlight case	1	Align the index marks on the case and bracket.