

ENGINE

Low Speed/high Speed Performance

- * Adjust idling once the engine is warm
- * Synchronize carbs after overhauling them

Start engine

Place gears in neutral. Turn throttle stop screw to adjust idling speed.

Idle Speed: 1200 ± 100 rpm

If idling speed is imbalanced or there is a snapping then synchronize carbs (4-16)


Air Cleaner Element

- Remove seat and fuel tank
- Remove screws and air cleaner case
- Remove element from air cleaner case

Inspect element for dirt and wear
If dirty then clean it. If worn then replace it
Wash element with oil cleaner in a safe way.

- * Do not clean element with petrol, solvents or alkalis
- * If element is installed squashed then it will become easily worn thus needing replacement

After completing this, then apply Ultra U (4 cycle motorcycle SAE 10W-30 or AP SE 10W-30 engine oil spread over element evenly and reinstall

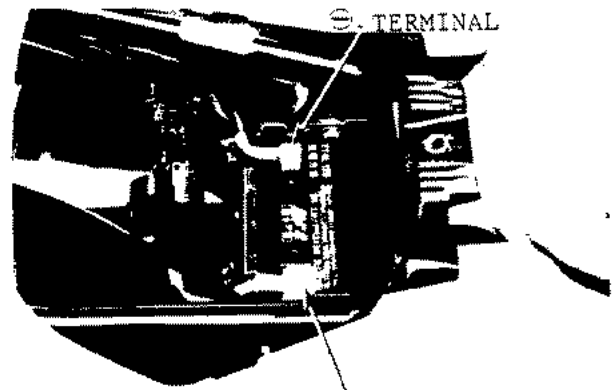

TERMINAL



SLIDE ADJUST SCREW

