
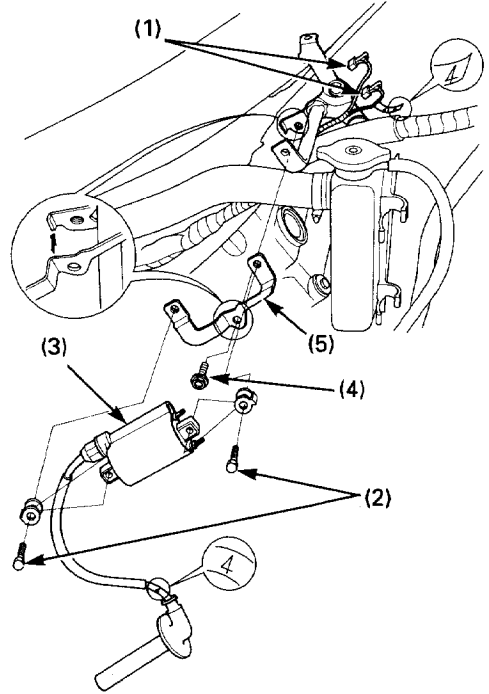


Ignition Coil Removal/Installation (After '93)

No.2/No.4 Ignition Coil (Front):

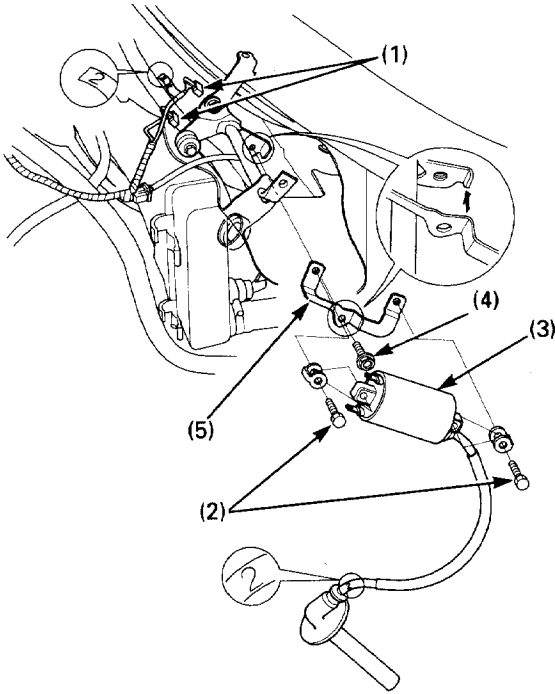

NOTE

- The cylinder numbers are printed on each spark plug wire. Be sure to install each spark plug caps on the correct cylinder.

Requisite Service

- Spark plug cap removal/installation (page 3-7)
- Upper fairing removal/installation (page 2-12)

Procedure		Q'ty	Remarks
(1)	Removal Order Connector	4	Installation is in the reverse order of removal. Connect the cylinder numbered wires to the green colored terminals. At installation, align the edge of the stay with the tab of the frame.
(2)	Bolt	4	
(3)	Ignition coil	2	
(4)	Bolt	2	
(5)	Stay	2	