Replacement

CAUTION

- **The VFR750F uses a drive chain with a staked master link. Use only the replacements specified. Never attempt to use a chain with a clip-type master link.**

Loosen the drive chain.

Assemble the special tool.

S. TOOL

Drive chain cutter **07HMH–MR10102**
– Link plate holder **07NMH–MW00110**

NOTE

- When using the special tool, follow the manufacturer's operating instructions.

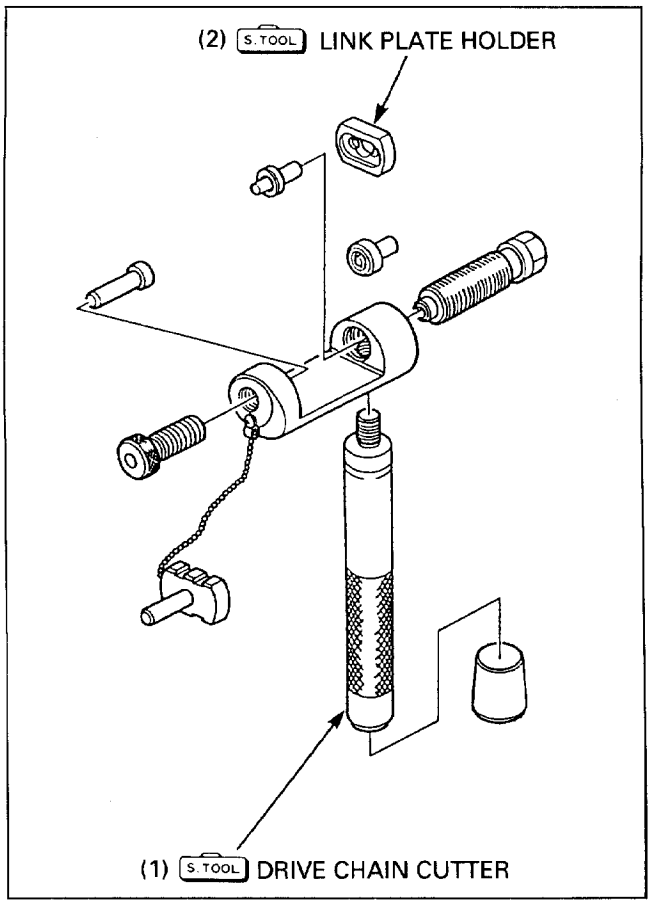

Locate the crimped pin ends of the master link from the outside of the chain and remove the link with the chain cutter.

Remove the drive chain.

Remove extra drive chain link(s) from the new drive chain using the drive chain cutter.

NOTE

- Include the master link when you count the drive chain links.

Replacement chain: DID.: DID50V4
RK: RK50MF0Z1

Specified links: 112 links

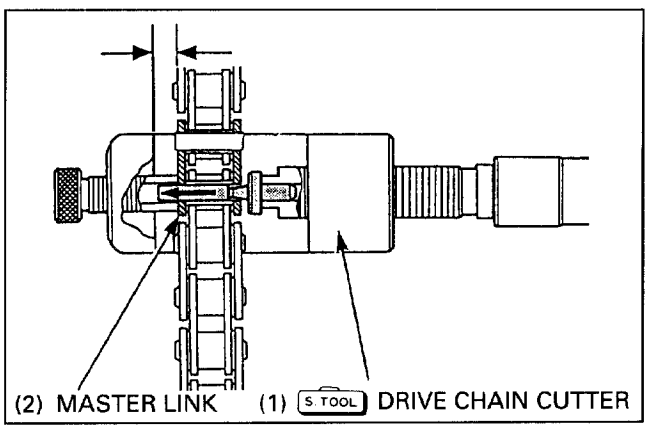

CAUTION

- **Never reuse the old drive chain, master link, master link plate and O-rings.**
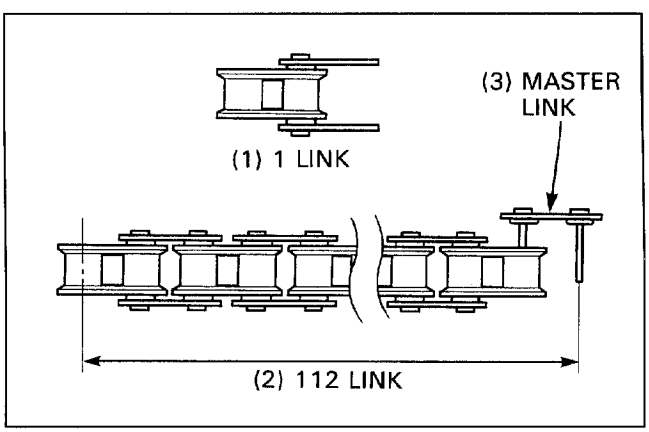
Install the new drive chain.