


Front Wheel Removal


1. Raise the front wheel off the ground by placing a support block under the engine.
2. Disconnect the speedometer cable ① and front brake cable ② from the front brake backing plate.
3. Remove the cotter pin ③, and the front axle nut ④.
4. Pull out the front axle ⑤, and the front wheel can be removed from the frame.

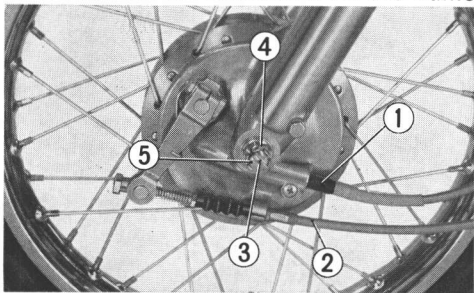

- | | |
|---------------------|------------------|
| ① Speedometer cable | ④ Front axle nut |
| ② Front brake cable | ⑤ Front axle |
| ③ Cotter pin | |

Rear Wheel Removal

1. Place a support block under the engine to raise the rear wheel off the ground.
2. Remove the cotter pin ①, loosen the rear axle nut ②, drive chain adjusting nuts ③, and disconnect the drive chain.
3. Remove the rear brake adjusting nut ④ and rear brake rod from the brake arm.
4. Remove the rear torque arm bolt ⑤ at the rear brake backing plate.
5. Pull out the rear axle ⑥, and the rear wheel can be removed from the frame.

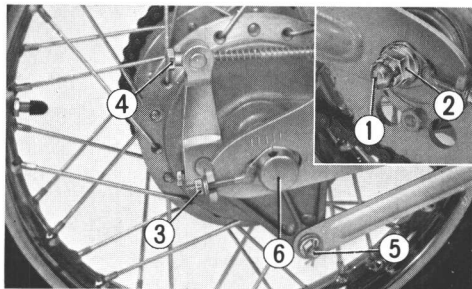

- | | |
|-----------------------------|-------------------|
| ① Cotter pin | ⑤ Torque arm bolt |
| ② Rear axle nut | ⑥ Rear axle |
| ③ Drive chain adjusting nut | |
| ④ Rear brake adjusting nut | |