


Front Suspension Adjustments


21. Clean the threads of the fork protector socket bolts (20) and axle holder thoroughly. Apply locking agent to the bolt threads. Install the fork protectors (21), fork protector bolts. Tighten the fork protector socket bolts to the specified torque:
7 N·m (0.7 kgf·m, 5.2 lbf·ft)

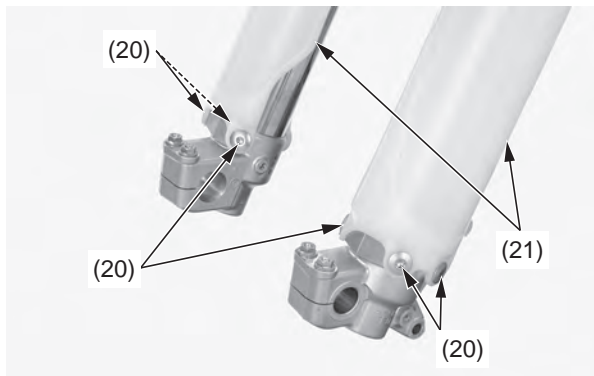

(20) fork protector socket bolts
(21) fork protectors


22. Align the brake caliper (22) and hose (23) with the left fork leg, making sure that the brake hose is not twisted. An improperly routed brake hose may rupture and cause a loss of braking efficiency.
23. Assemble the stay B (24), brake hose (23) and stay A (25). Install and tighten them to the left fork protector using the brake hose clamp bolts (26).

24. Clean the threads of the brake caliper mounting bolts (27) and brake caliper thoroughly. Apply locking agent to the bolt threads. Install the brake caliper (22) on the slider and tighten the brake caliper mounting bolts to the specified torque:
30 N·m (3.1 kgf·m, 22 lbf·ft)

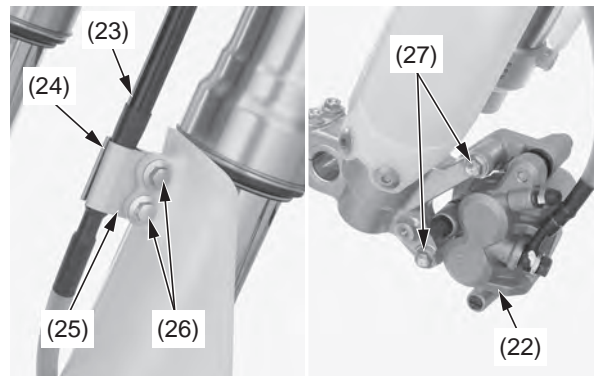


(22) brake caliper
(23) brake hose
(24) stay B
(25) stay A
(26) brake hose clamp bolts
(27) brake caliper mounting bolts

25. Clean the surfaces where the axle and axle clamps contact each other. Apply grease to each dust seal lip of the front wheel. Install the disc cover/collar (28) and right side collar (29) into the wheel hub.

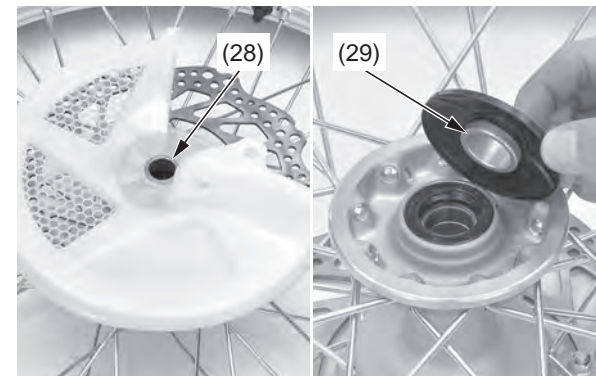

(28) disc cover/collar (29) right side collar

26. Install the front wheel between the fork legs while inserting the disc between the pads, being careful not to damage the pads.
27. Insert the front axle shaft through the forks and wheel hub from the right side. Make sure that the front axle shaft is seated firmly onto the left fork leg clamp inner surface. Tighten the front axle nut (30) to the specified torque:
88 N·m (9.0 kgf·m, 65 lbf·ft)
Tighten the left axle pinch bolts (31) to the specified torque:
20 N·m (2.0 kgf·m, 15 lbf·ft)

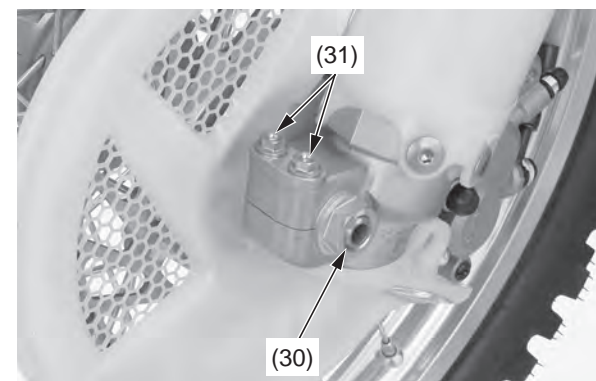

(30) front axle nut
(31) left axle pinch bolts