

Rebound damping:


The rebound damping adjuster has at least 12 positions. Turning the adjuster one full turn advances the adjuster 6 positions.

To adjust to the standard position:

1. Turn the damping adjuster (1) clockwise until it will no longer turn. This is the full hard setting.
 2. Turn the adjuster counterclockwise 3 clicks until the punch mark (2) on the adjuster aligns with the reference mark (3). This is the standard position.
- Make sure that both the right and left forks are adjusted in the same position.

CAUTION:

- **Always start with full hard when adjusting damping.**

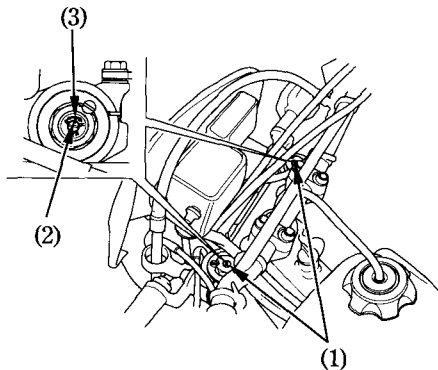

- (1) Damping adjuster
- (2) Punch mark
- (3) Reference mark